


- GB** Installation Guide
- D** Einbauanleitung
- F** Guide d'installation
- I** Guida all'installazione
- E** Guía de instalación
- PL** Instrukcja montażu

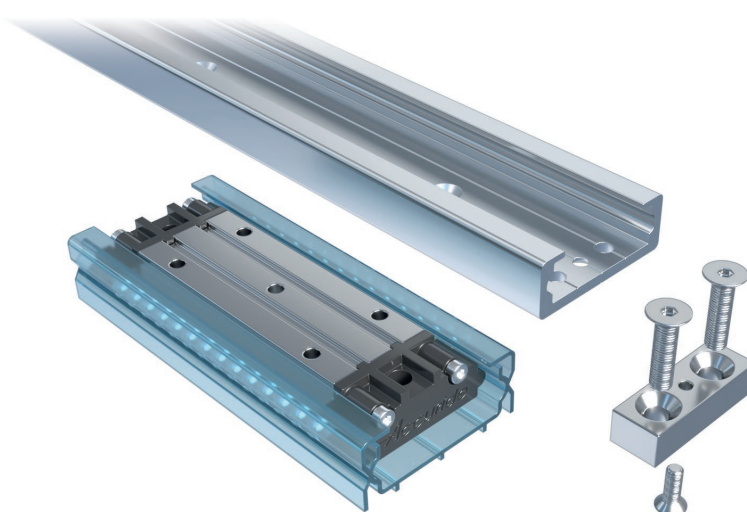

DA0118-0240RCH (with fixing holes)

DA0118-0240RC (no fixing holes)

DS0118-CASSRC (Carriage with stainless steel balls)


DP0118-CASSRC (Carriage with polymer balls)

DP0118-ECRC (Damper)



DA0118-STOPRC (End stop)

DS0118-SMBRKTRC (Side mount door bracket)



DS0118-BRKTRC (Recycling bracket)

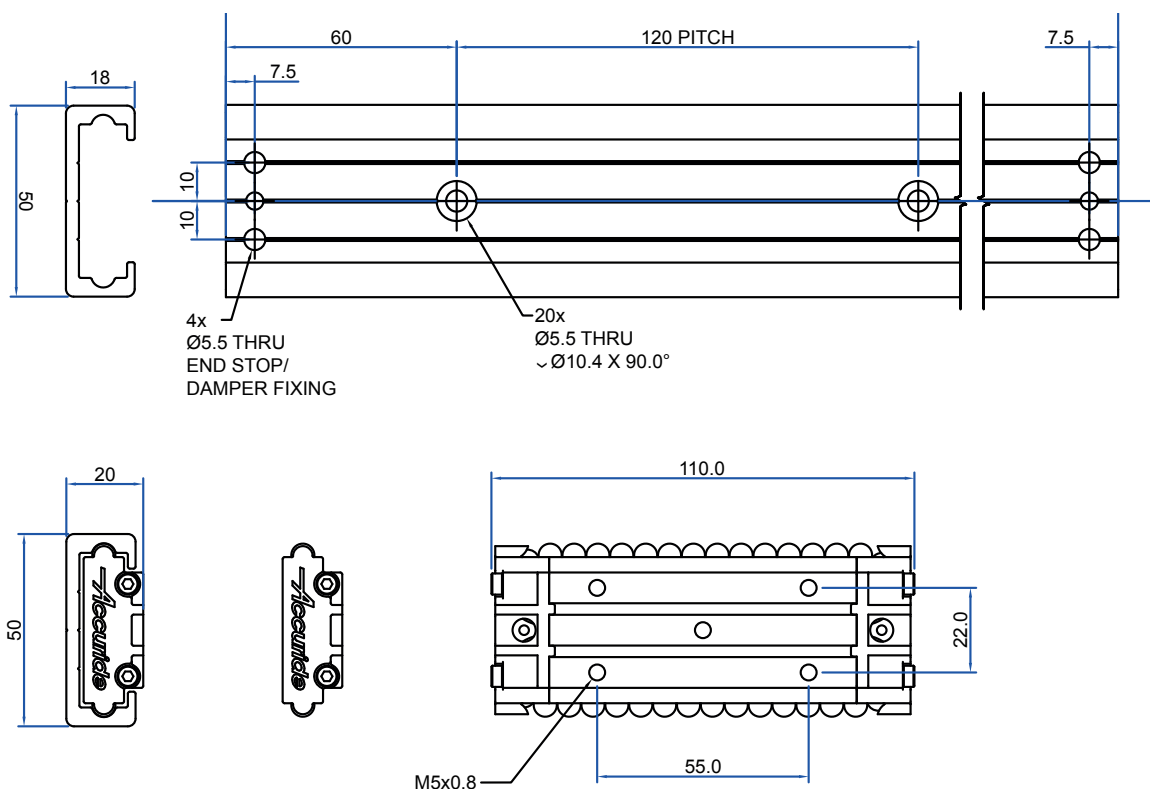


Sliding door installation

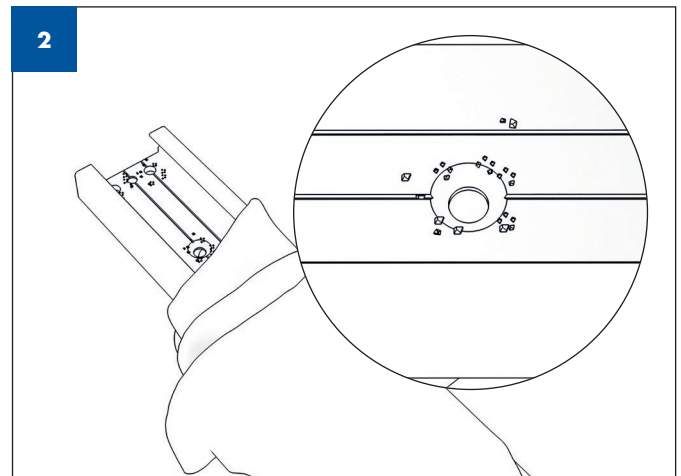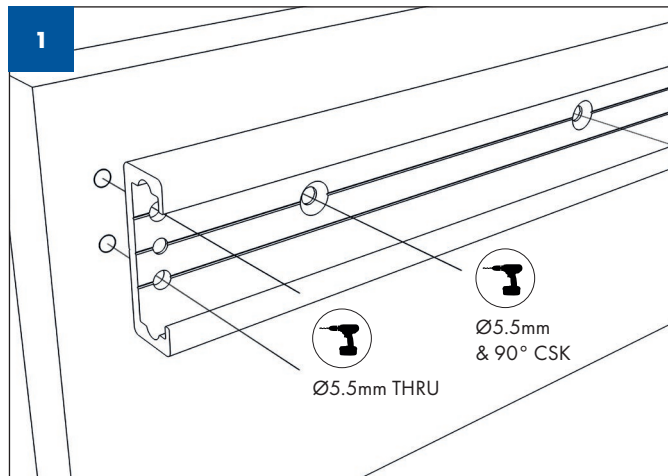


Wipe the rail clean of debris.

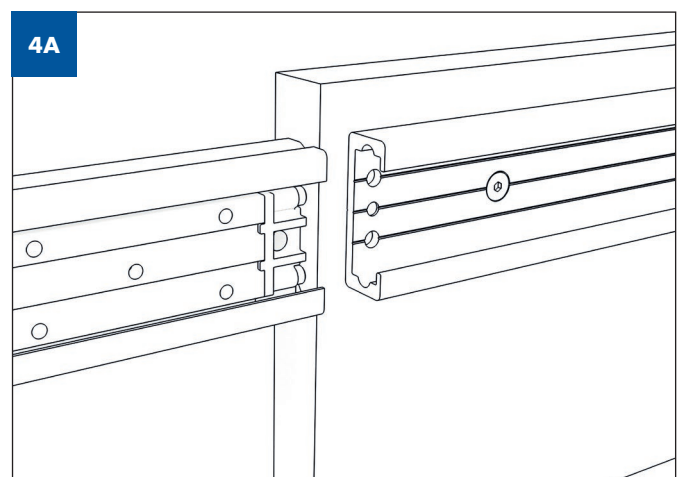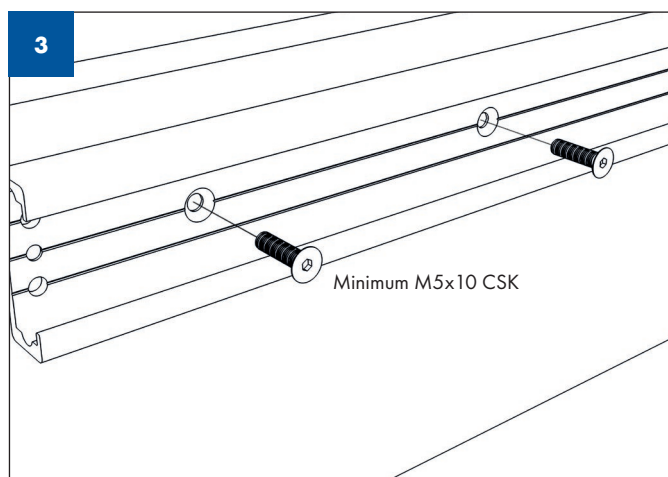


Align carriage sleeve to rail, carefully slide carriage into rail.

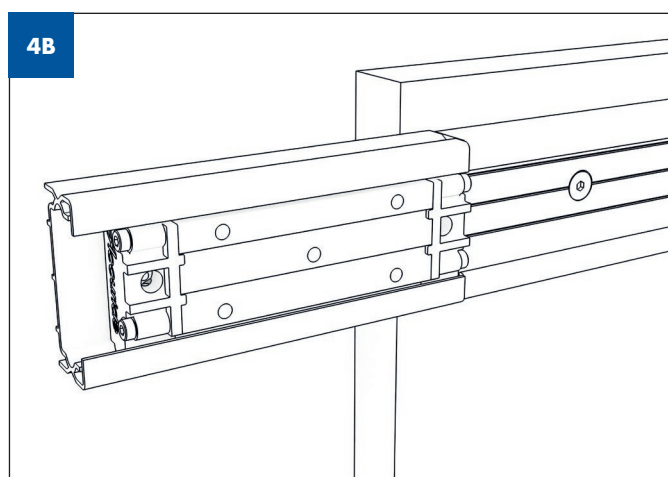




When the carriage is fully in the rail remove the transport sleeve. The balls will not be retained if removed too early.

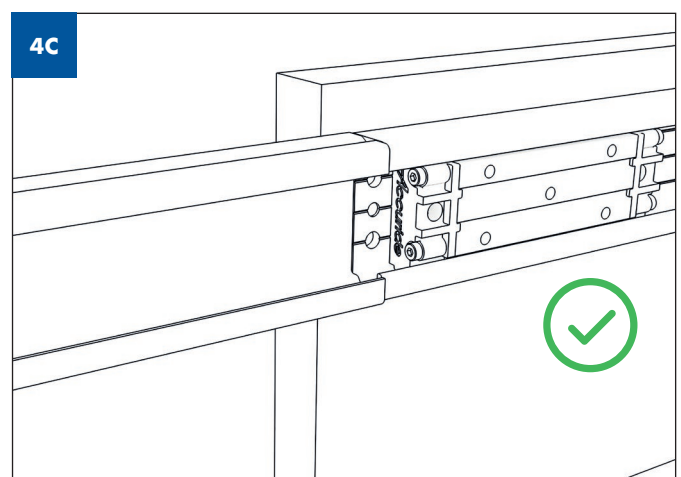


Sliding door installation

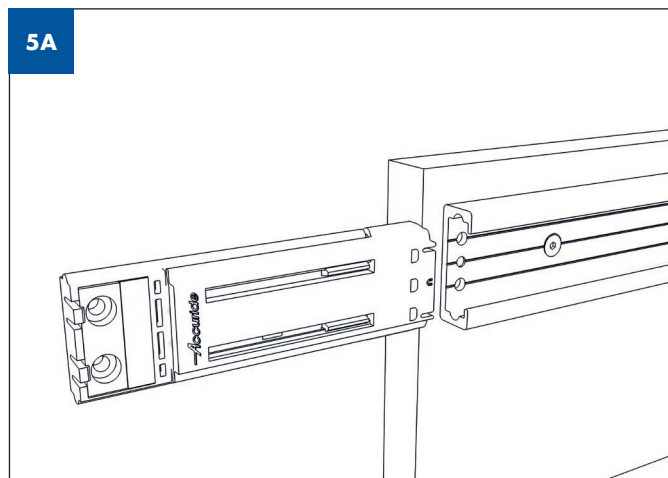


Insert the damper(s) into each end of the rail. If dampening is not needed, end stops may be used instead.

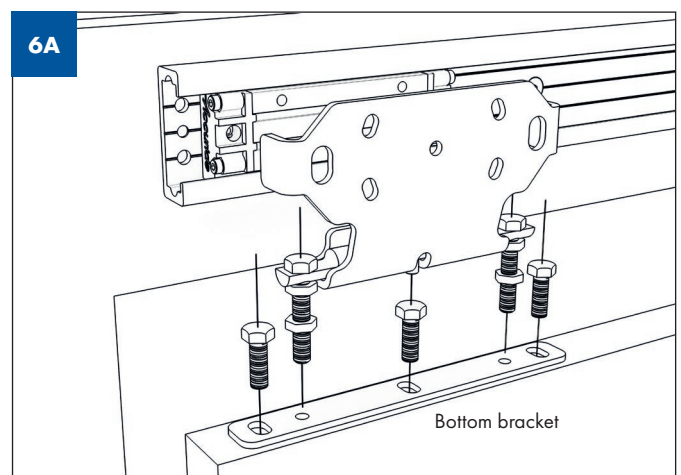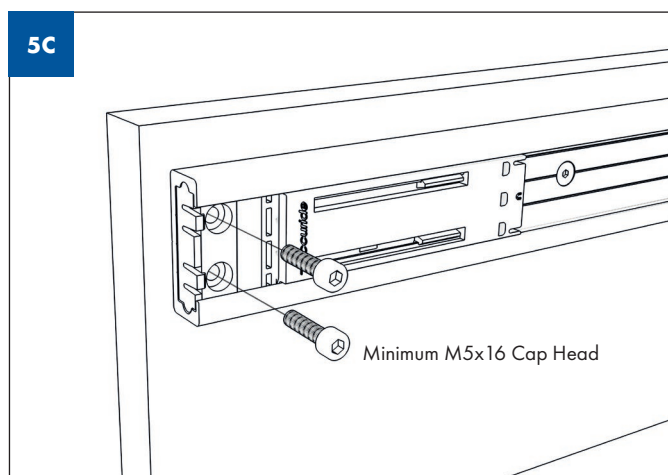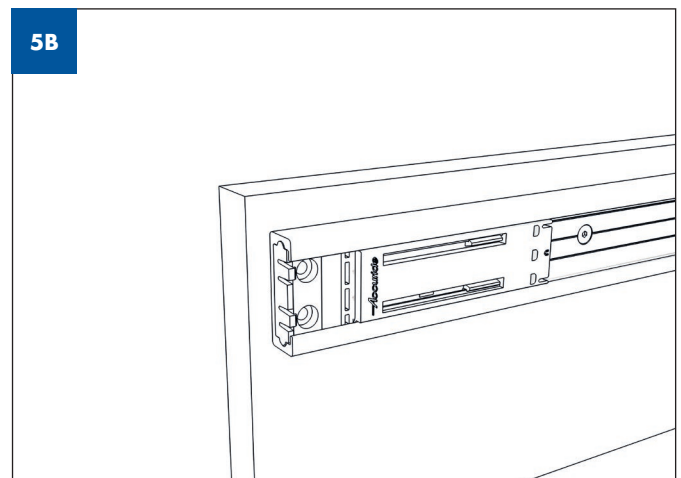

Attach the bottom bracket to the top of the door using 3x bolts, M6 are recommended. Then attach the rest of the door bracket to this bracket using the bolts provided.

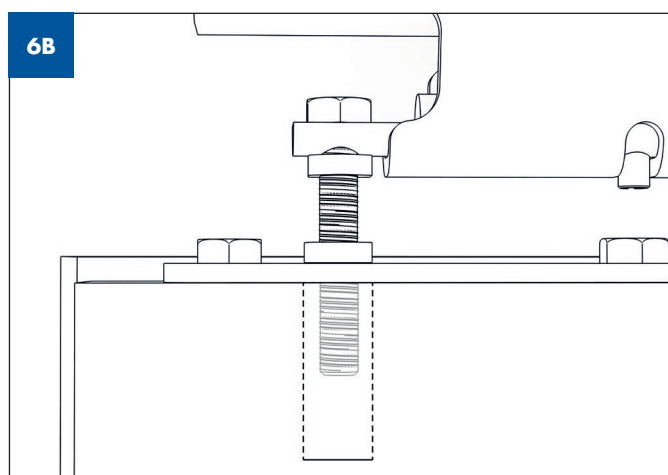


The bolts provided should always extend through the bottom bracket into the door. Depending on the door, a clearance hole may need to be drilled to achieve this.

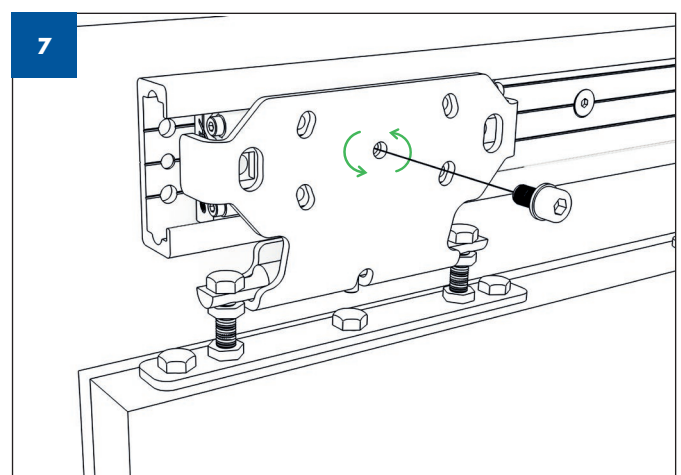


Attach the bracket to the carriage using the central fixing, using one of the screws provided. This is used as a pivot point.


Sliding door installation

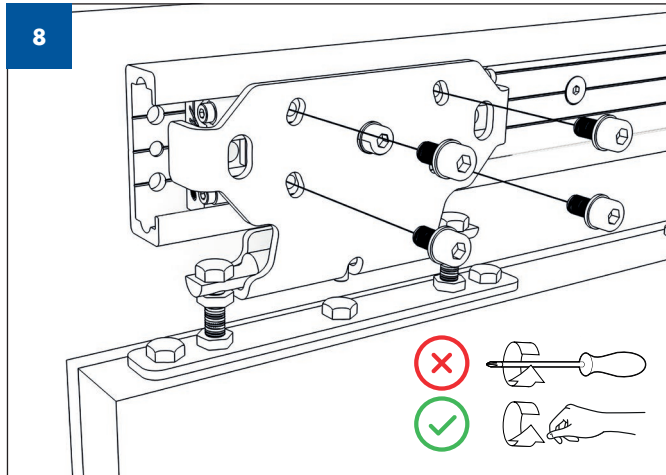



Attach the remaining four screws to the bracket. Leaving them "finger tight".

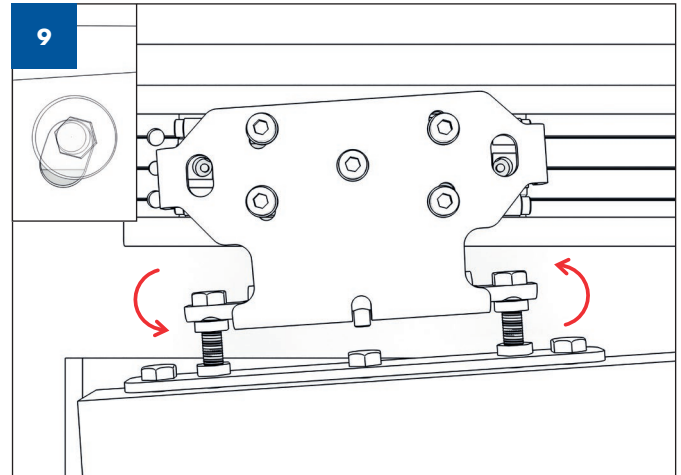


The bracket will pivot slightly to aid height adjustment.

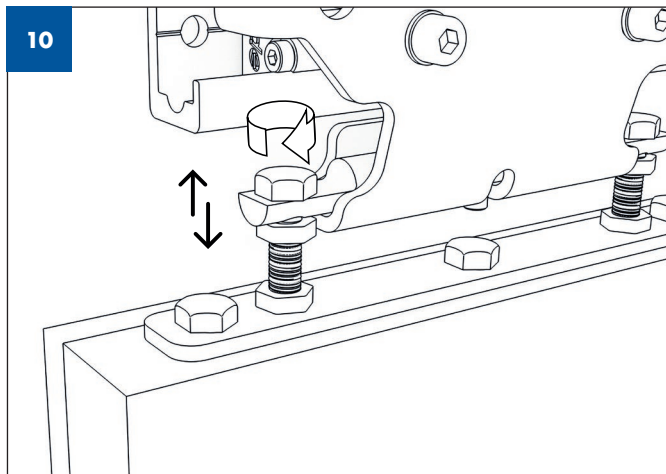

Adjust the bolts up and down to level the door. The nuts may need to be loosened to achieve this.

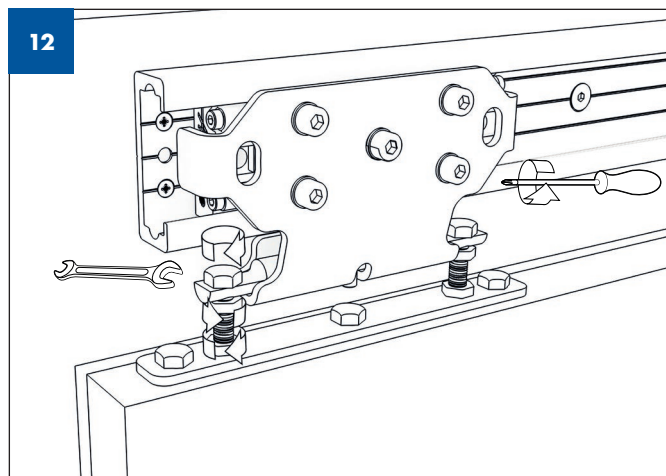
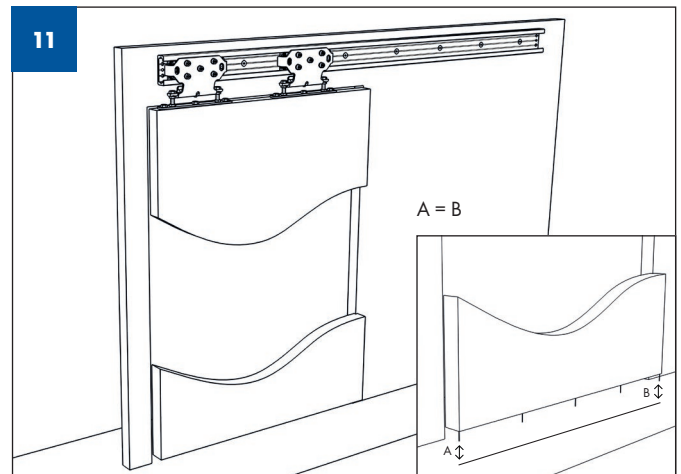


Important – tighten all nuts, bolts and screws.


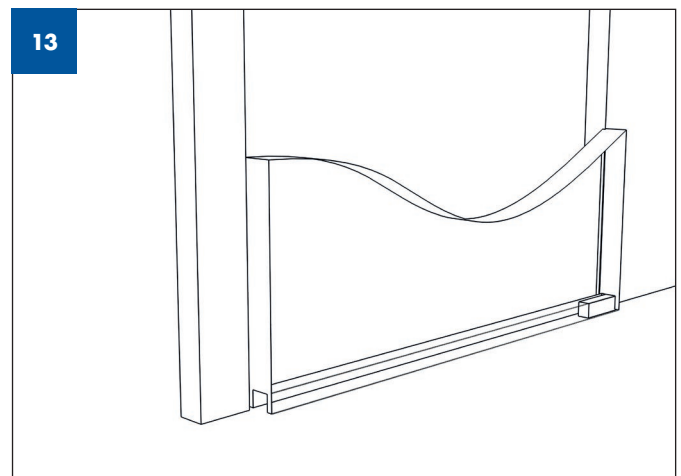


Optional – customer may add a guide to the bottom of the door.

End stop installation

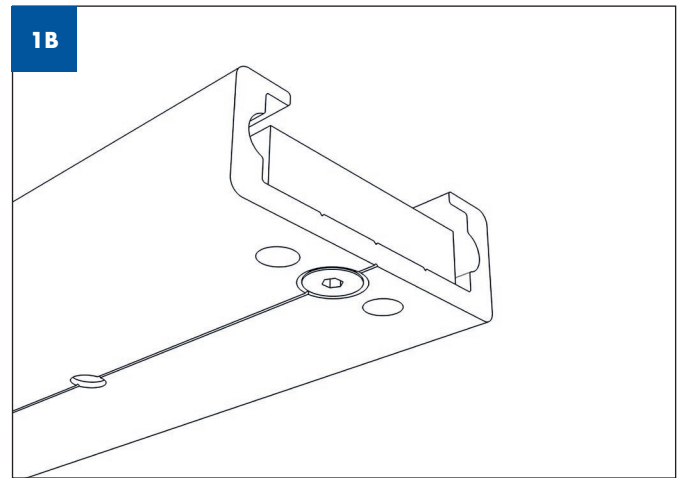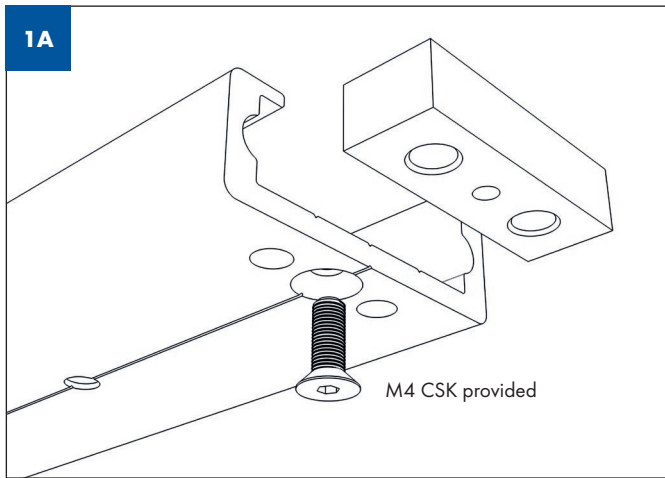

Optional – an extra central hole may be used to hold the end stop in place during installation (not suitable for prolonged use). Screw provided for this.

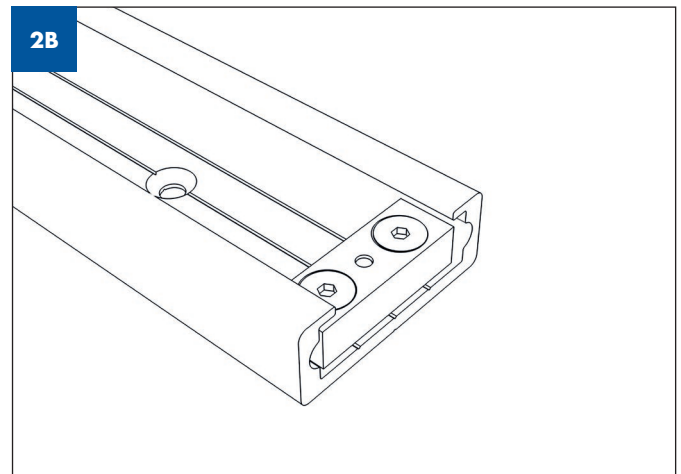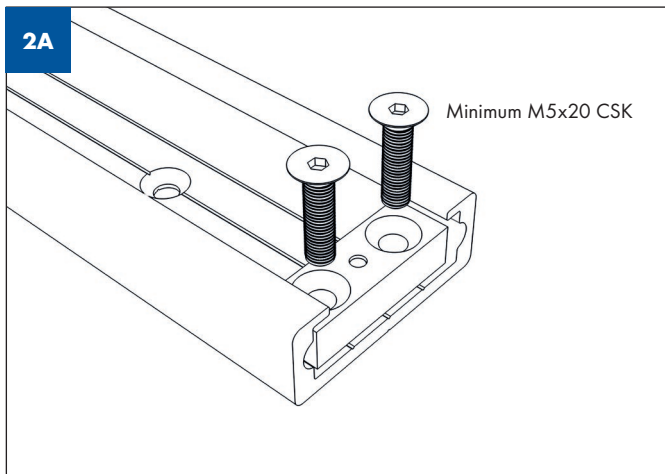

Accuride International Ltd.

Liliput Road, Brackmills Industrial Estate, Northampton
NN4 7AS, United Kingdom.

Tel: +44 (0) 1604 761111

E-mail: sales@accuride-europe.com

www.accuride-europe.com

Accuride International GmbH

Werner-von-Siemens-Str. 16-18,
65582 Diez/Lahn, Germany

Tel:+ 49 (0) 6432 608-0

GB

If you require further assistance, please contact Accuride.
Accuride reserve the right to alter specifications without notice.

D

Wenn Sie weitere Unterstützung benötigen, wenden Sie sich bitte an
Accuride. Technische Änderungen vorbehalten.

F

Pour de plus amples renseignements, veuillez contacter.
Accuride se réserve le droit de modifier les spécifications sans préavis.

I

Se hai bisogno di ulteriore assistenza, contatta pure Accuride.
Accuride si riserva il diritto di apportare modifiche senza ulteriore
comunicazione.

E

Si necesita más ayuda, por favor, contacte con Accuride.
Accuride se reserva el derecho de alterar las especificaciones sin aviso
previo.

PL

W razie dodatkowych pytań, skontaktuj się z Accuride.
Accuride zastrzega sobie prawo do wprowadzania zmian technicznych
bez wcześniejszej informacji.